




5 min.






x1

BLANCA

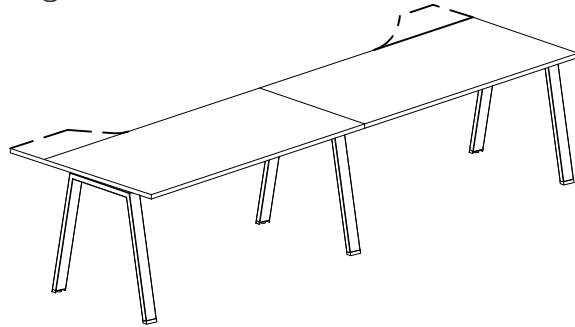


HOJA INSTRUCCIONES SERIE 2209_2210_2211_2212
INSTRUCTIONS LEAFLET SERIAL 2209_2210_2211_2212
BEDIENUNGSANLEITUNG 2209_2210_2211_2212

PIEZAS y HERRAMIENTAS
PARTS AND TOOLS
TEILE UND WERKZEUGE

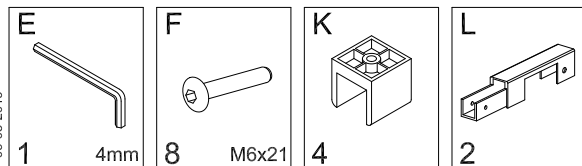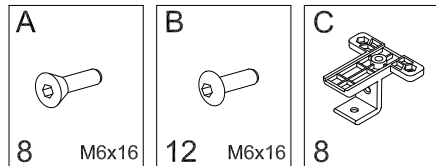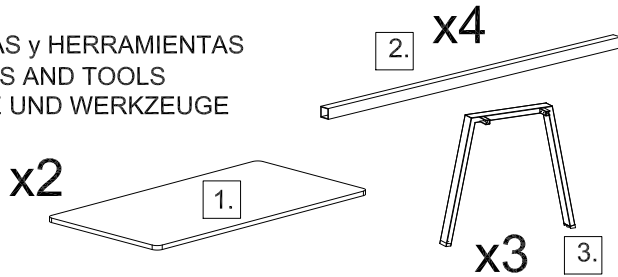

06-05-2019

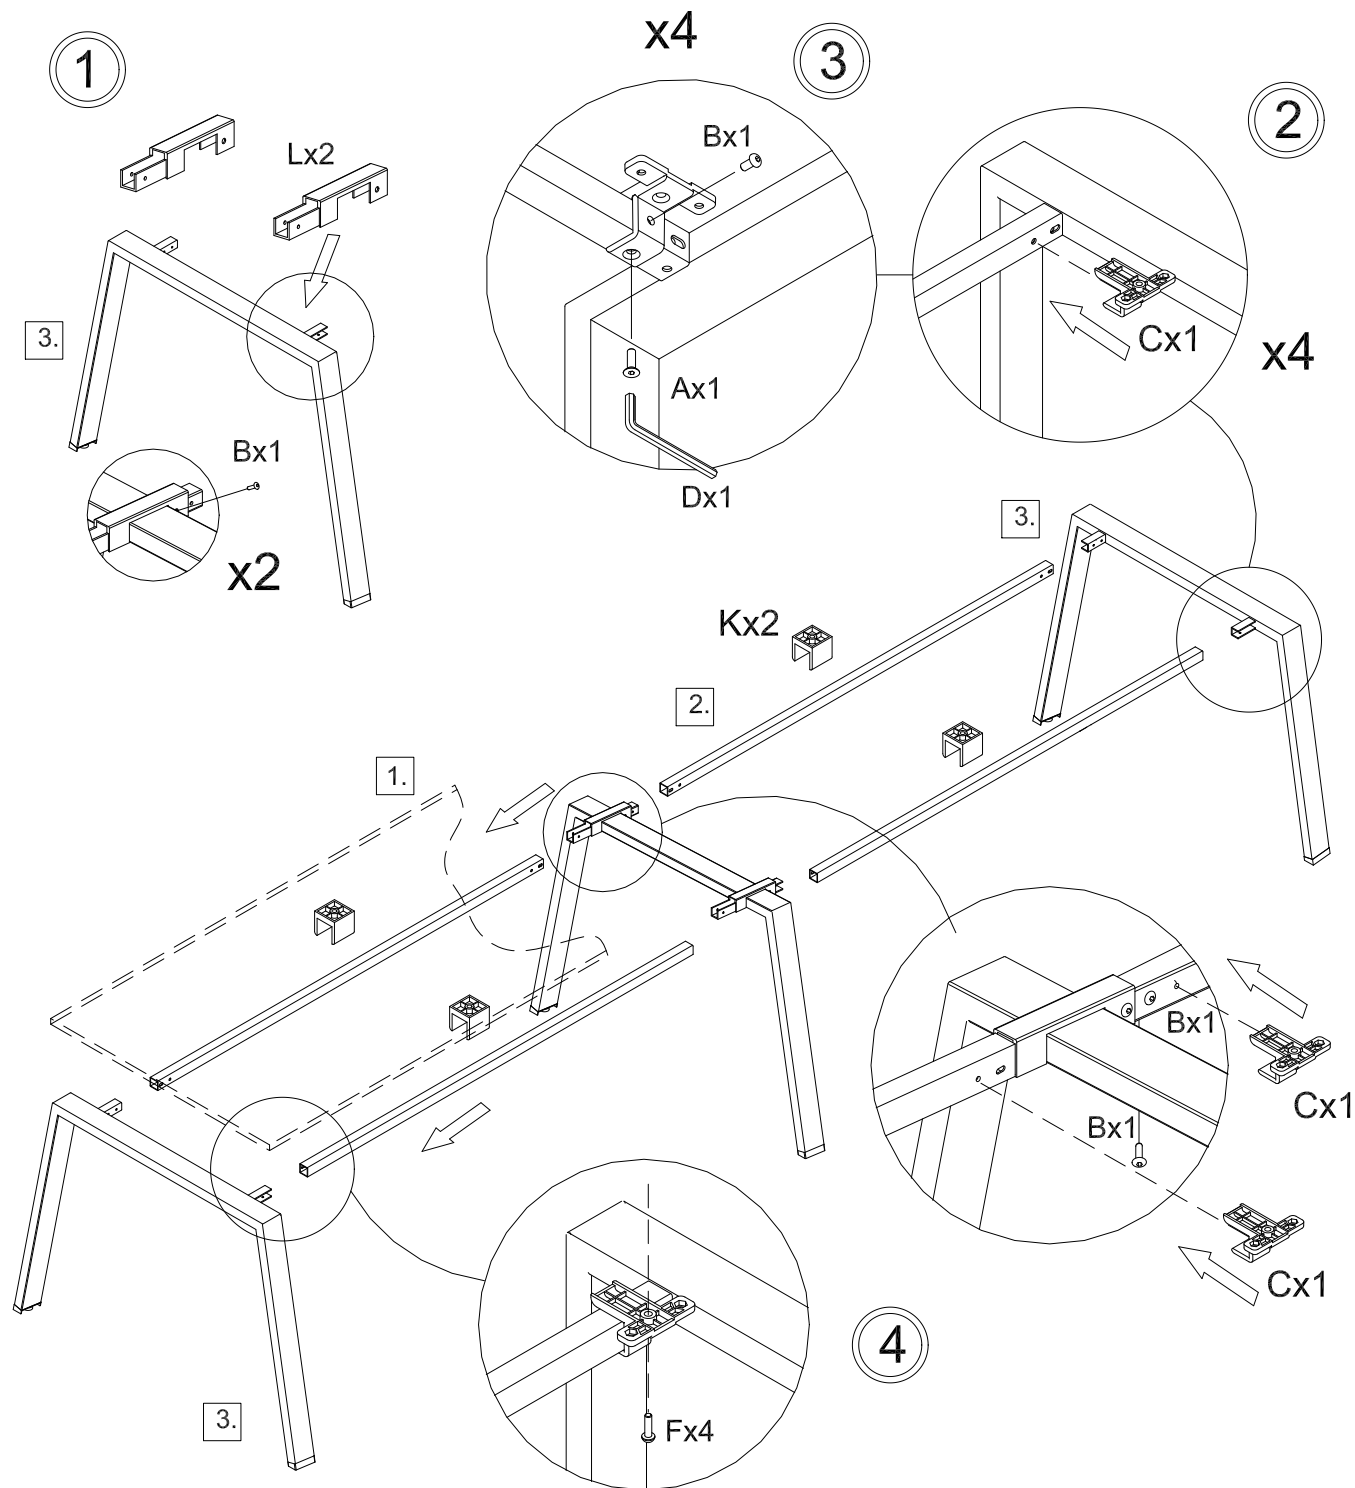




5 min.



x1



BLANCA

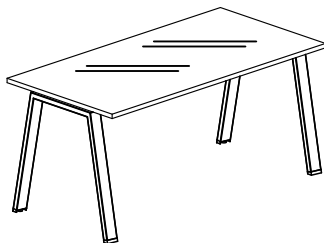


CRISTAL / GLASS

HOJA INSTRUCCIONES SERIE 2000_2001_2002_2003_2004_2005
INSTRUCTIONS LEAFLET SERIAL 2000_2001_2002_2003_2004_2005
BEDIENUNGSANLEITUNG 2000_2001_2002_2003_2004_2005

PIEZAS y HERRAMIENTAS
PARTS AND TOOLS
TEILE UND WERKZEUGE

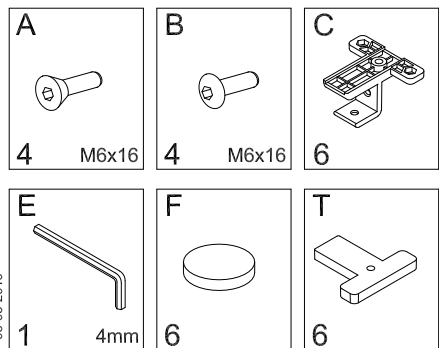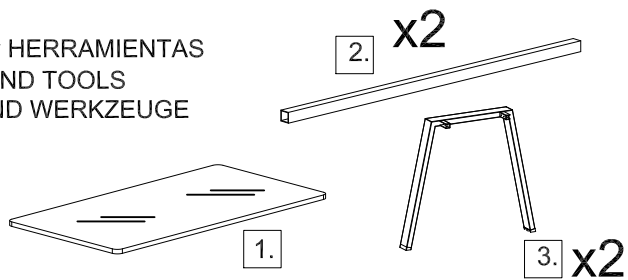

06-05-2019

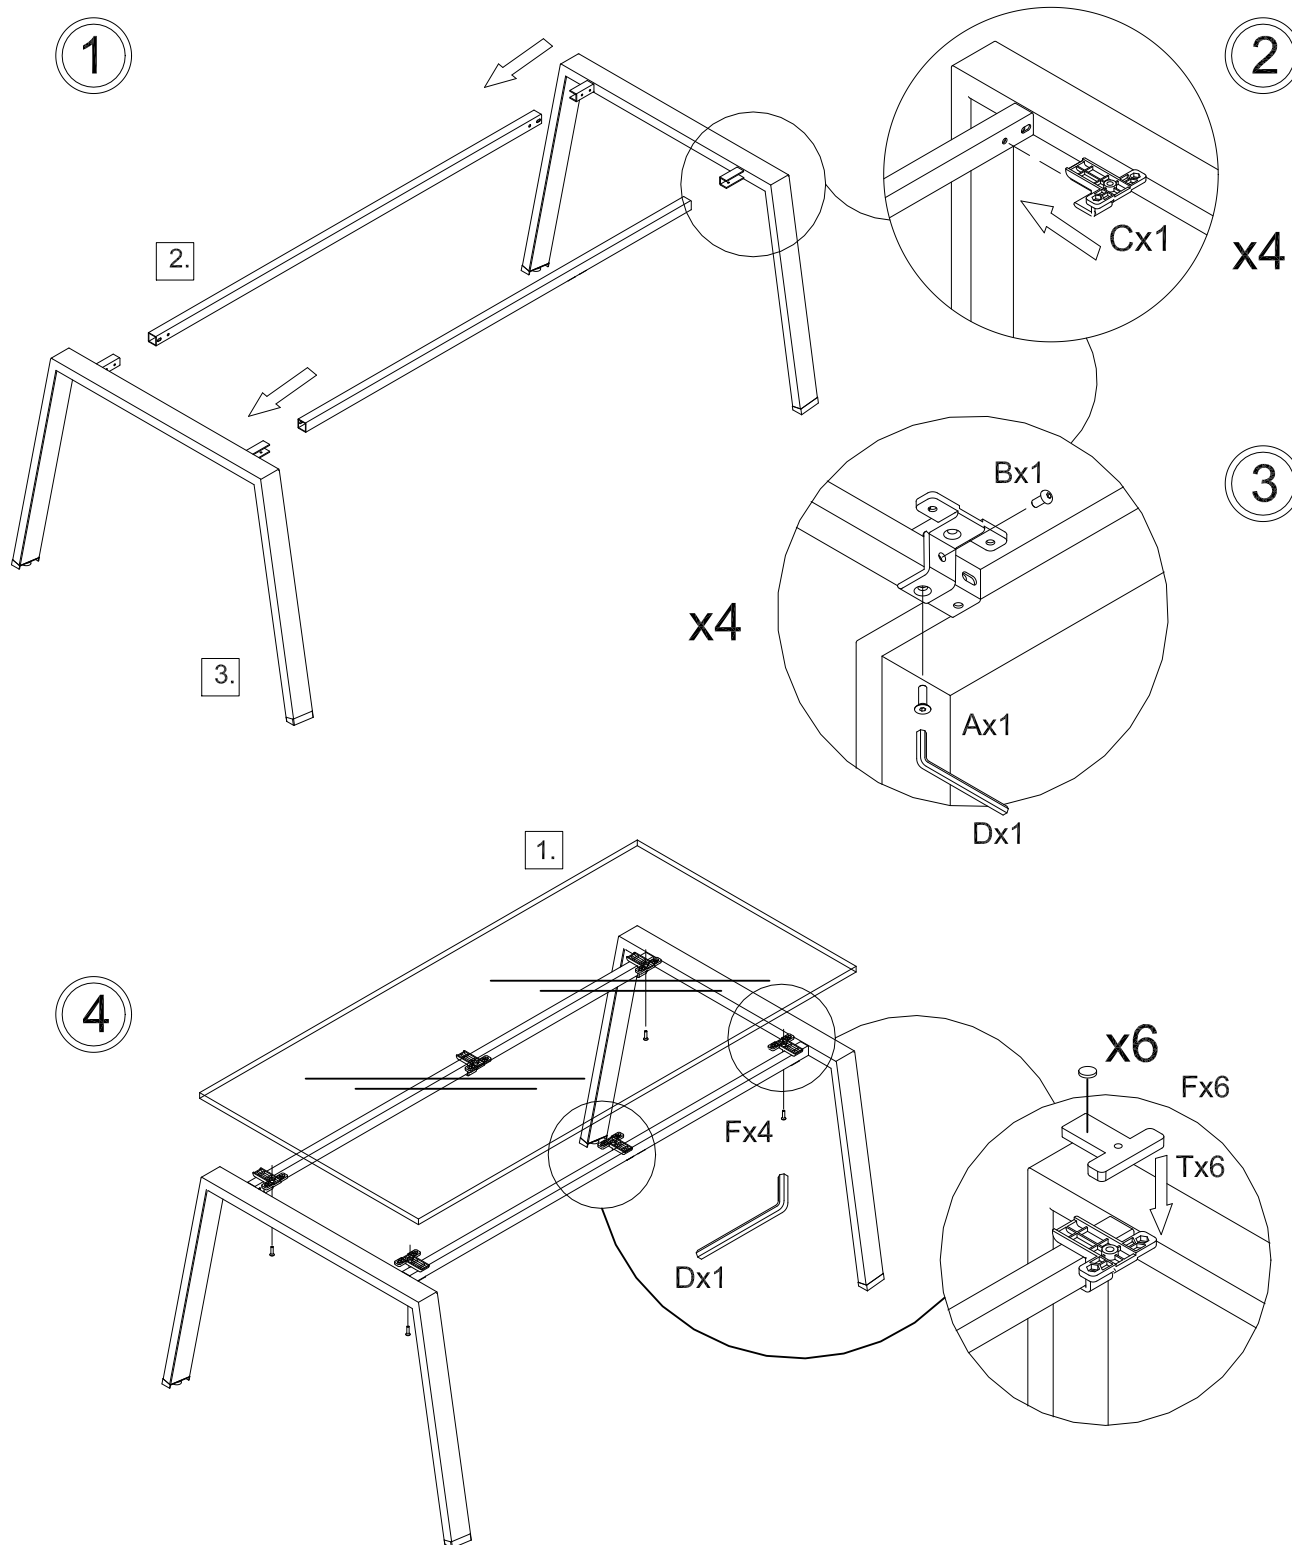



rocada

C/ de les Moreres s/n
08552 Taradell
Barcelona (Spain)

Phone +34 93 880 00 04
Fax +34 93 880 04 36

www.rocada.com
rocada@rocada.com




5 min.




x1

BLANCA

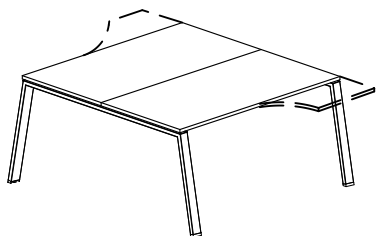

HOJA INSTRUCCIONES SERIE 2201_2202_2205_2206
INSTRUCTIONS LEAFLET SERIAL 2201_2202_2205_2206
BEDIENUNGSANLEITUNG 2201_2202_2205_2206

PIEZAS y HERRAMIENTAS
PARTS AND TOOLS
TEILE UND WERKZEUGE

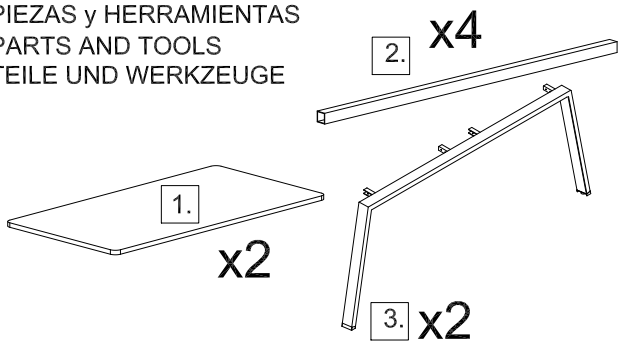

A 8 M6x16	B 8 M6x16	C 8
E 1 4mm	F 8 M6x21	K 4

06-05-2019

